

The Maxiguard respirator has been designed to protect its wearer from the inhalation of airborne contaminants but only if it is worn correctly.

Learn how to inspect and fit your respirator before you use it and make sure you do this in uncontaminated air.


If you have any questions about how to use your Maxiguard respirator, see your supervisor or consult AS/NZS 1715:2009 for advice on selection use and maintenance of respiratory protective equipment.

## Spare Parts & Accessories

Product Code	Description
R701-A1	Maxiguard A1 Organic Vapour Cartridge – pack of 1 pair
R701-A1P2	Maxiguard A1 Organic Vapour Cartridge w/ P2 Prefilter Combination – pack of 1 pair
R703-ABEK1	Maxiguard ABEK1 Chemical Cartridge – pack of 1 pair
R703-ABEK1P2	Maxiguard ABEK1 Chemical Cartridge with P2 Prefilter Combination – pack of 1 pair
R2000-P3C	Maxiguard P3 Carbon Particulate Filter (pink) - pack of 1 pair
R7N11-P2	Maxiguard P2 Particulate Prefilter – pack of 5 pairs
R510	Maxiguard Prefilter Holder – pack of 1 pair
R7500-H	Replacement Harness for R7500 half-mask
R7500IV-5	Inhalation Valve to suit R7500 - pack of 5 pairs
R7500EV-5	Exhalation Valve to suit R7500 - pack of 5 pairs

## 1 INSPECTION

**!**  
Inspect the respirator before each use. If any parts are missing or damaged replace those parts or the entire mask.

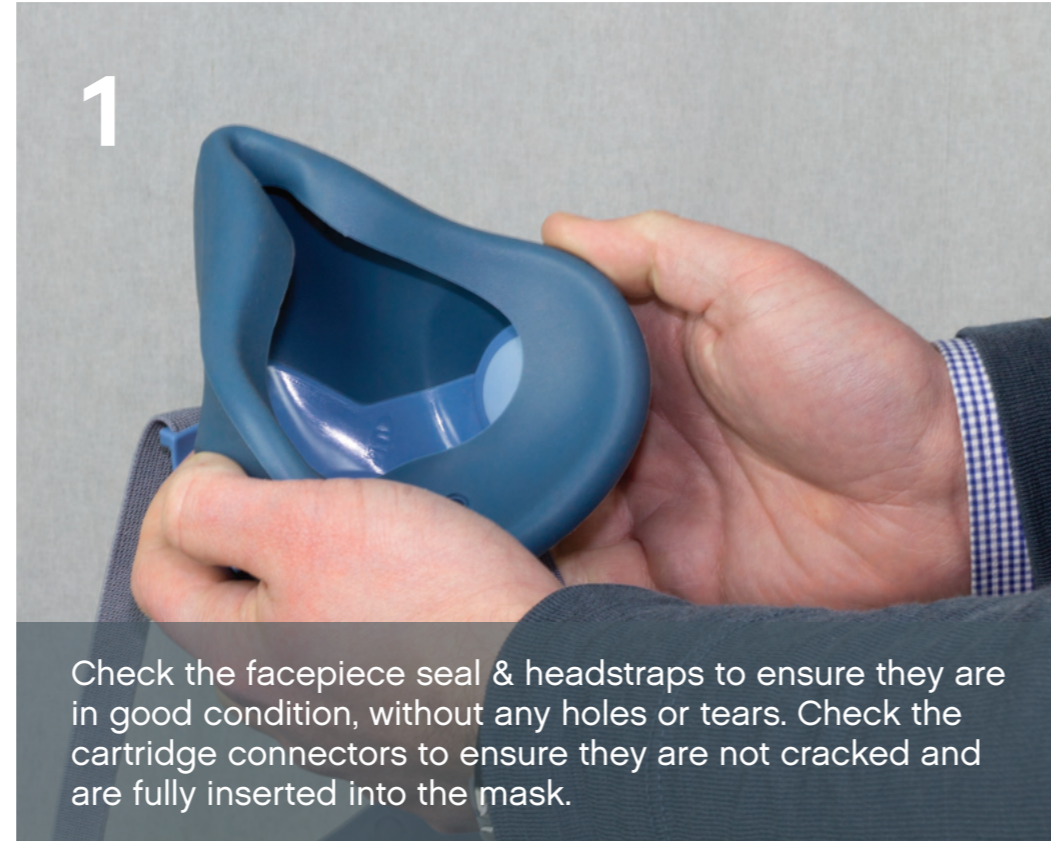


## 2 ASSEMBLY

**!**  
If replaceable particulate filters aren't used go to the last step in this section.



## 3 FITTING

**!**  
Remove any hard hat or eyewear before fitting your respirator. Put this safety gear back on after fitting.

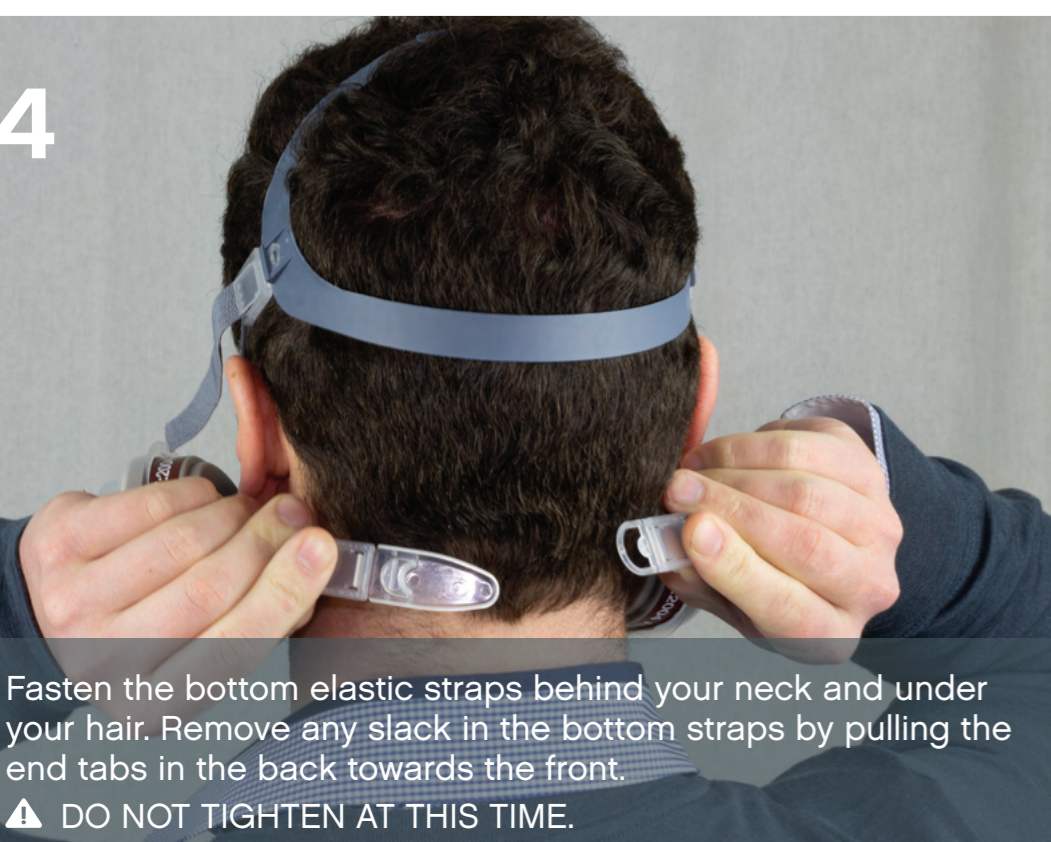

## 4 SEAL CHECK

**!**  
A positive/negative pressure seal check ensures the respirator is seated correctly and in good working order. Exhale vigorously before performing seal checks.



**!**  
If any air leaks are detected during either check, reposition the facepiece and/or readjust the head straps. Repeat the seal check(s) until a seal is obtained.